
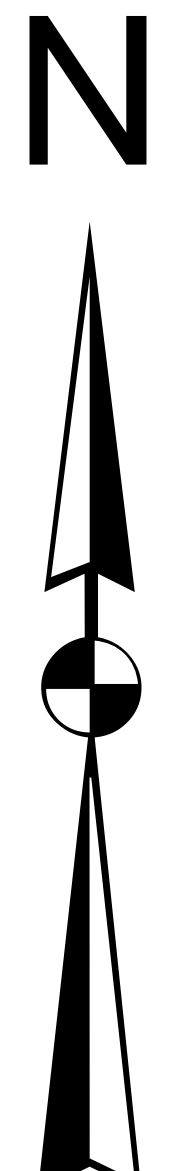


Prepared by:
 Department of Public Works
 Engineering Division
 Thursday, April 6, 2023

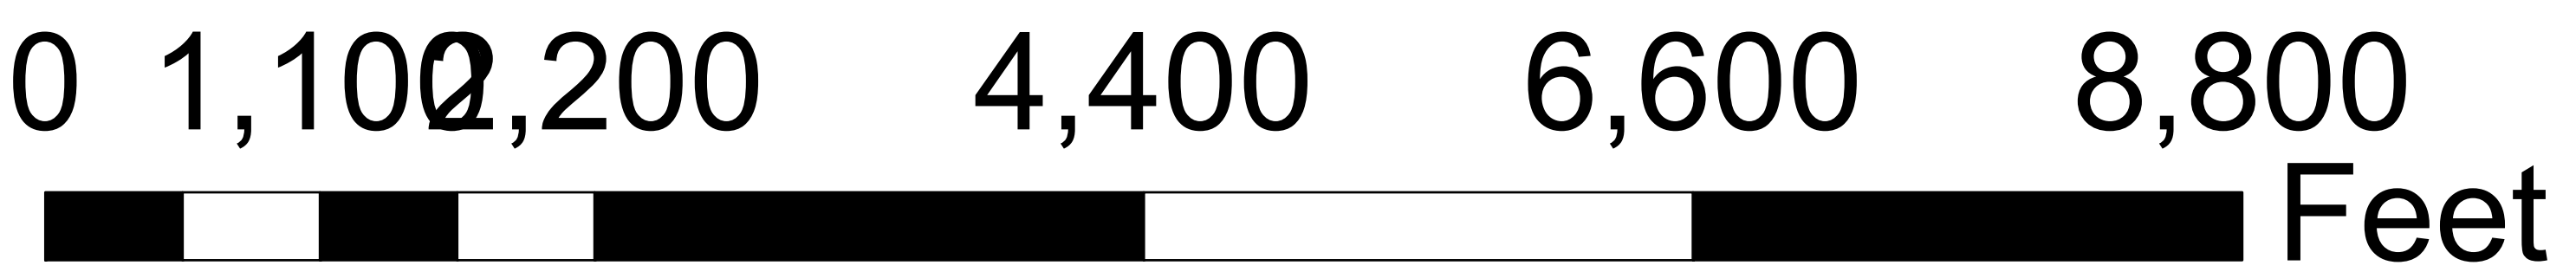

#21 UPLAND ROAD

Install Cape Cod berm on pad, loam & seed behind berm

Raise & adjust driveway apron. Approx 3"-4" high by 4'-5' wide.



Install Cape Cod
berm on pad, loam
& seed behind
berm

